


**STEP ONE:** Remove the security screw using the provided allen wrench from the center of the shelf (A) and temporarily place it in the side of the cart (B) to hold the tray open during the wiring process.


**STEP TWO:** Determine the length of cable that is needed to reach from the tray to the devices.

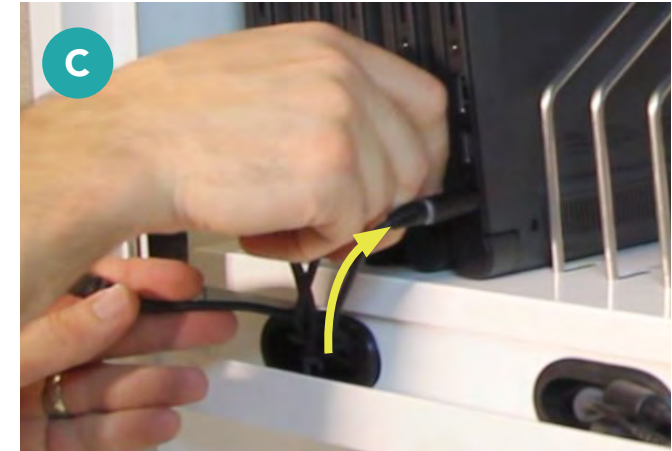

**STEP THREE:** Determine the best method of arranging the cables that come with your device (figures D, E below).


### AC ADAPTERS FRONT TO BACK

Best for some wider adapters.

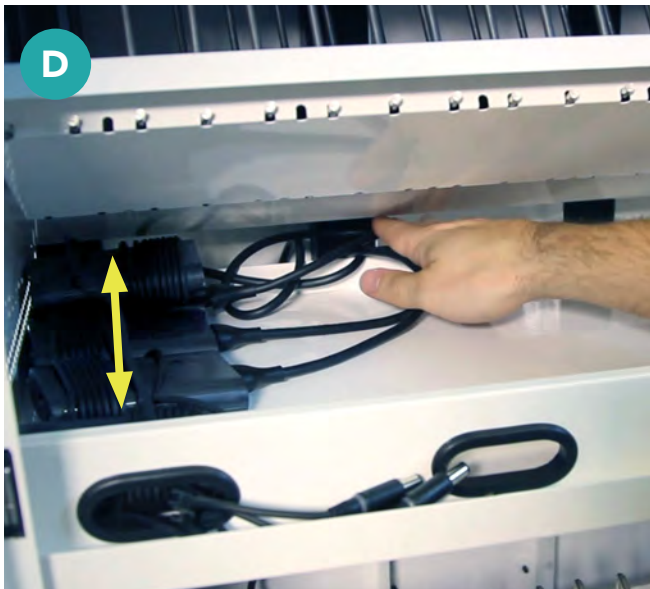

### AC ADAPTERS LEFT TO RIGHT

Best for some narrower adapters.

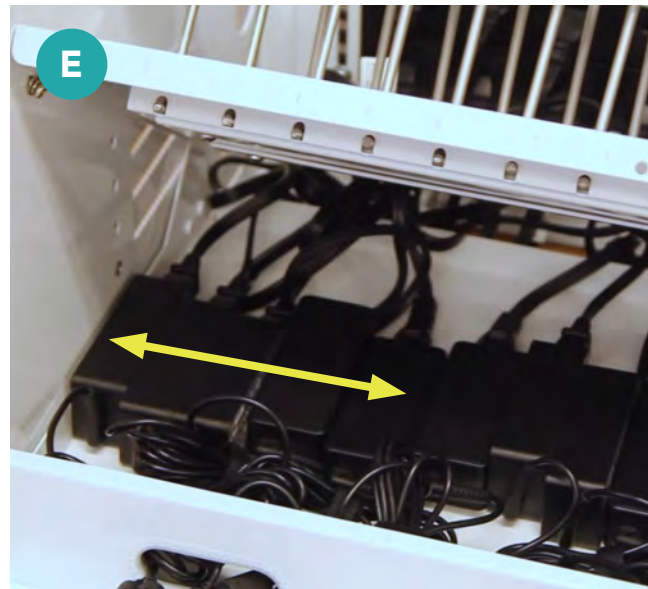

**STEP FOUR:** Arrange adapters in decided configuration, leaving just enough cable length sticking out of the port to plug in the devices.

**TIPS:**

- Adapters can often be installed just as they come bundled in the box. For example, the adapter in figure (F) comes with the cable wrapped around the adapter and it works out nicely when installed in that condition. If the cables are not bundled at all, twist ties or Velcro ties may be helpful.
- If the devices have particularly large AC adapters (approximately 5" x 2" x 1.25") the adapters will fit more snugly in the tray. In this case it may be best to arrange the majority of the adapters as far back in the tray as possible from left to right, flipping about half on their side. Contact JAR Systems for additional assistance.

**STEP FIVE:** Plug the charger into the power strip. For best results, bundle any excess cable length if it is not already. (G)

**STEP SIX:** (OPTIONAL) Replace the security screw in the center of the shelf to prevent adapters from being removed or tampered with. (H)

